


LAKSHMI BRAND ROOT WEAR GAUGE

HOW TO USE:

1. Loosen the knurled screws and move the indicators **A**, to the backward limits.
2. Hold the gauge on the wheel / tyre as shown in the figure.
3. Move the indicators **A** forward until the ends touches the Root respectively.
4. Tighten the knurled screw.
5. Remove the gauge from the wheel / tyre and read Root thickness directly on the scale.

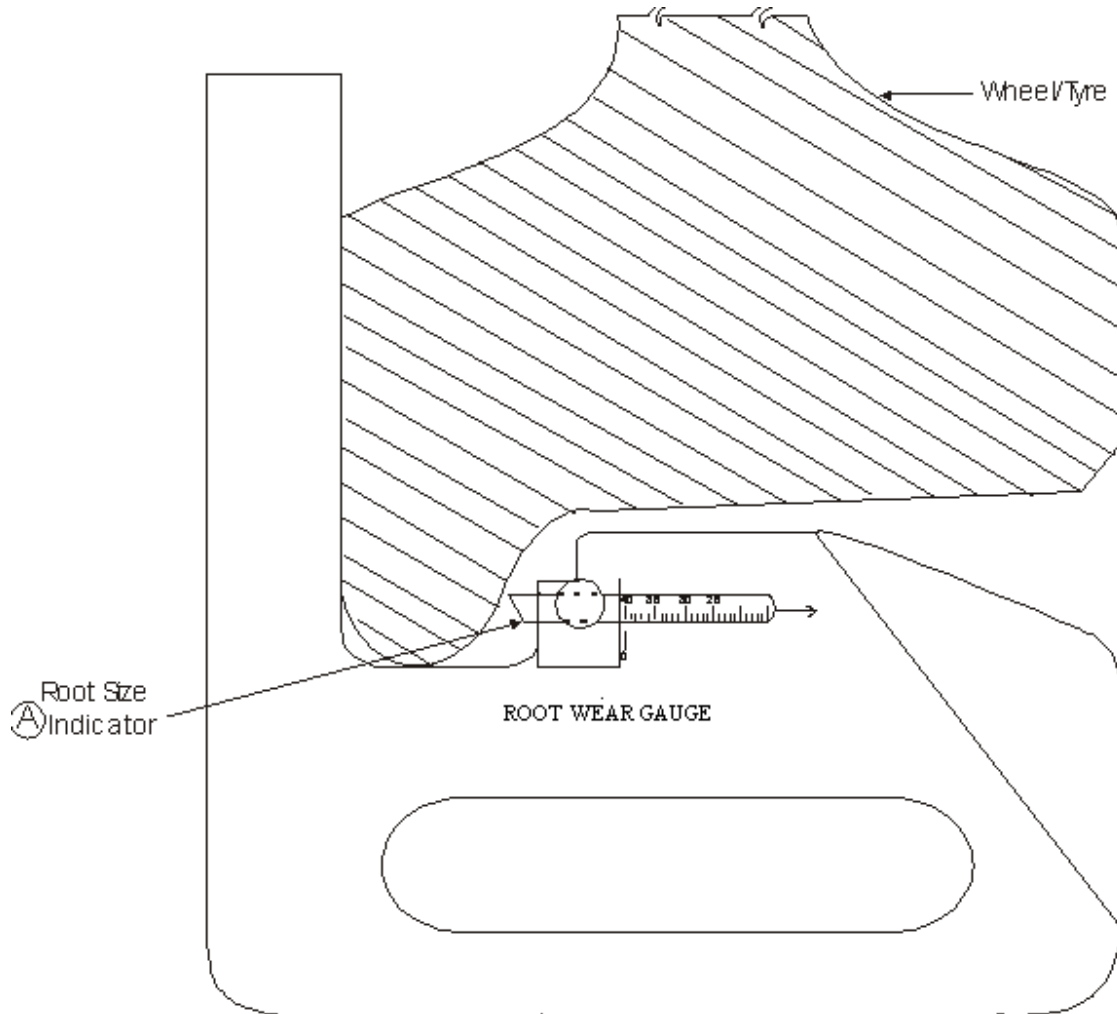

(Right reserve for modification or alteration without notice for betterment of the product)

LAKSHMI INDUSTRIAL CORPORATION

48-52, BEHIND OLD TEHSIL, MEERUT CITY- 250002 (U.P)
Admin Office: - Plot no.-10-11, Khasra no.-467, Mohkampur Industrial Area,
Phase-II, Delhi Road, Meerut City-250002(U.P.)
Ph.no: 0121-2401482 / 2950515

E-mail: railwaymachines@gmail.com