

HOW TO USE:

Loosen the knurled screws and move the indicators A, B, & C to their backward limits. Hold the gauge on the wheel / tyre of Carriage and Wagon wheels as shown in the figure.

Move the indicators B, A & C forward until their ends touch the tread, root and flange respectively.

Tighten the knurled screw.

Remove the gauge from the wheel / tyre and read the tread wear, root wear and flange wear direct on the scale.

Tread Wear Gauge

